

C-shaped Block Installing Instruction


1. FUNCTION

Pasted on the surface of Laser TV or Laser Cinema cabinet to prevent Laser TV or Laser Cinema console from moving.

2. INSTALLING

Step 1

Take two C-shaped blocks out of the accessory bag.

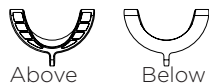


Step 2

After adjusting the casters on the Laser TV or Laser Cinema console to an appropriate position, tear off the release paper on the C-shaped blocks.




Step 3

Hold the C-shaped blocks with the inward curve facing the console, approach them from both sides, and paste them on the outside of the two casters in the front as shown in the illustration. Make sure that there is no gap between the blocks and the casters.

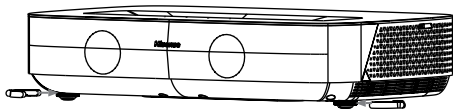


Step 4

Slightly lift the console and press down on the C-shaped blocks to ensure they are firmly adhered to the cabinet. The finished installation is as follows.

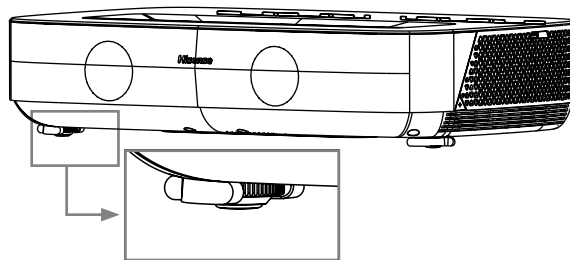

Step 5

Slightly rotate the console to check if it is fixed on the cabinet. If not, remove the C-shaped block and reinstall it.

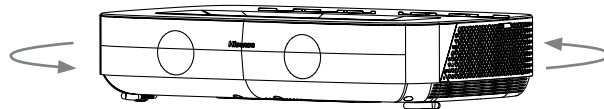

NOTE:

- The adhesive on the C-shaped block will not leave a mark on your cabinet when taken off.
- The two blocks may be pasted on the outside of the two casters on the back or in the front of the console.
- Images and installation steps throughout this document are for illustrative purposes only and may differ from the actual product.